





"Fast Clamp" Sway Brace Attachment

1000

Technical Features

- **Sizes available for bracing pipe (Nominal) :** DN25/1" to DN100/4". To be used together with bracing pipe DN25/1" and DN32/1 1/4".
- **Features :** No threading of bracing pipe required. Can be used as a longitudinal brace or a 4-way riser brace. All steel construction. Steel leaf spring ensures verification of proper installation.
- **Material :** Carbon steel.
- **Finish :** Plain or electrogalvanized.

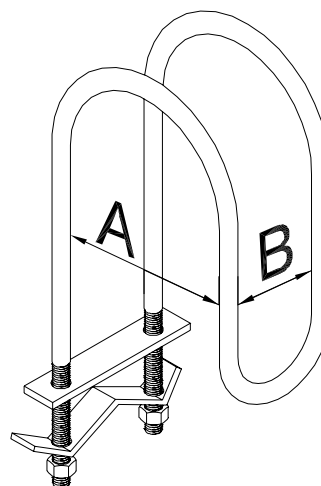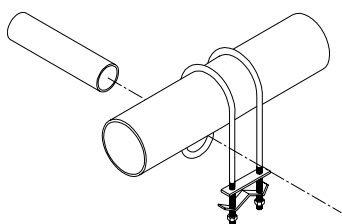

1 - When used with other Tolco® bracing products.



"Fast Clamp" Sway Brace Attachment - 1000

Physical Data

"A"		"B"		Box Quantity	Box Weight (kg / lbs)	Reference	
Nominal (metric)	Pipe Size (inch)	Nom. Bracing (metric)	Pipe Size (inch)			Europe	Asia / America
DN25	1"	DN25	1"	25	9 / 20	1000100100	1000-0100
DN32	1 1/4"	DN25	1"	25	9 / 20	1000125100	1000-01250100
DN40	1 1/2"	DN25	1"	25	9 / 20	1000150100	1000-01500100
DN50	2"	DN25	1"	25	9 / 20	1000200100	1000-02000100
DN65	2 1/2"	DN25	1"	20	8 / 17	1000250100	1000-02500100
DN80	3"	DN25	1"	20	9 / 20	1000300100	1000-03000100
DN100	4"	DN25	1"	20	10 / 22	1000400100	1000-04000100
DN25	1"	DN32	1 1/4"	25	10 / 22	1000100125	1000-0100125
DN32	1 1/4"	DN32	1 1/4"	25	10 / 22	1000125125	1000-0125
DN40	1 1/2"	DN32	1 1/4"	25	10 / 22	1000150125	1000-0150125
DN50	2"	DN32	1 1/4"	25	10 / 22	1000200125	1000-0200125
DN65	2 1/2"	DN32	1 1/4"	20	9 / 20	1000250125	1000-0250125
DN80	3"	DN32	1 1/4"	20	9 / 20	1000300125	1000-0300125
DN100	4"	DN32	1 1/4"	20	11 / 23	1000400125	1000-0400125

Installation Instructions

Designed, tested, and approved to be used only with other Tolco® bracing products available from Viking SupplyNet.

The "Fast Clamp" Sway Brace Attachment is designed to be used in conjunction with Series 900 sway brace attachments all joined together with bracing pipe and installed according to National Fire Protection Association (NFPA) 13, Edition 1999 for bracing pipe against sway

and seismic disturbance. **SPECIAL NOTE:** Length of bracing pipe per the National Fire Protection Association (NFPA) 13.

Position Fast Clamp over the pipe to be braced. Slide bracing pipe through both attachment holes so that it extends at least 25mm (1") beyond the Fast Clamp. Tighten down the two bolts until the leaf spring flattens.