

Electrical
specs on
page 2



OLT Plus Series - Single Phase, Tank Mounted Air Compressors for Dry Pipe Sprinkler Systems

**OLT
Series** **Plus**



This oilless tank mounted air compressor is UL1450 listed for use in sprinkler systems.



- UL1450 listed
 - Oil Less Piston Compressor
 - UL Listed Pressure Switch
 - ASME Coded Tank
 - Bubble tight air check valve
 - Permanently lubricated bearings
 - Customized Motor Windings
 - Integrated Air Intake Filters
 - Fully automatic, direct drive
 - Max Pressure: 60 PSI
 - 30" Stainless Steel Flex Hose
 - Vibration Isolation Pads
- Specifically designed to fill the sprinkler system to 40 PSI in 30 minutes**

System Capacity*	Model Number	Average CFM**	Motor HP	Recommended Wire Size +	Dimensions			Tank Size (gal.)	Weight (lbs)
					L	W	H		
125 gal.	OL12516ACT	1.52	1/6	12	34"	13"	27"	10	76
250 gal.	OL25033ACT	3.03	1/3	12	34"	13"	27"	10	77
365 gal.	OL36550ACT	4.43	1/2	12	34"	15"	25"	10	84
430 gal.	OL43075ACT	5.21	3/4	10	34"	15"	25"	10	96
615 gal.	OL615100ACT	7.46	1	6	34"	15"	25"	10	96
915 gal.	OL915150ACT	11.10	1 1/2	6	38"	16"	28"	20	135
1225 gal.	OL1225200ACT	14.85	2	10	38"	16"	29"	20	145

Accessories:



Air Maintenance Device - Part # AMD-1

The AMD-1 is **required** for supplying air to a dry pipe system when using a tank mounted unit. The AMD-1 regulates the volume of air being delivered to the system.

Motor Line Starters - Thermal Overload Protection Single Phase

Maximum HP	115V	208/230V	Size	Model
	1/3 HP	1 HP	00	MG00A
1 HP	2 HP	0	MGX0A	
2 HP	3 HP	1	MG01A	
3 HP	5 HP	1P	MG15A	



When Ordering a Motor Starter you **must** specify HP, Voltage and Phase that is supplied to the motor.

Notes:

- * System Capacity based on 70°F system temperature.
- ** Average CFM is the average free air delivery from 0 to 40 PSIG
- + Recommended Wire Sizes based on 100ft run. consult factory for longer or shorter runs.

VOLTAGE - All Single Phase Units:

Up to 2 HP: 115/208-230 VAC / 3 to 5 HP: 208-230 VAC

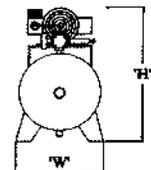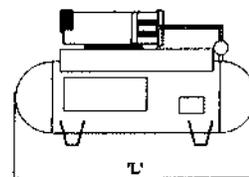



OLT Plus Series - Single Phase Tank Mounted Fire Protection Air Compressor Electrical Cut Sheet

**OLT
Series** Plus



This oilless tank mounted air compressor is UL1450 listed for use in sprinkler systems.



Model Number	Nominal HP	Factory Wired Voltage	Amperage (amps)			Recommended Wire Size Based on Run Length (gage)		
			Voltage	FLA	Start Up	25 FT	50 FT	100 FT
OL12516ACT	1/6	115	115	5	35	12	12	12
			208	2.3	16.1	12	12	12
			230	2.5	17.5	12	12	12
OL25033ACT	1/3	115	115	7.4	51.8	12	12	12
			208	3.5	24.5	12	12	12
			230	3.7	25.9	12	12	12
OL36550ACT	1/2	115	115	10	70	12	10	8
			208	4.9	34.3	12	12	12
			230	5	35	12	12	12
OL43075ACT	3/4	115	115	11.6	81.2	12	10	6
			208	5	35	12	12	12
			230	5.8	40.6	12	12	12
OL615100ACT	1	115	115	18	126	12	8	6
			208	7.7	53.9	12	12	12
			230	9	63	12	12	12
OL915150ACT	1 1/2	115	115	16.6	116.2	12	8	6
			208	8.2	57.4	12	12	12
			230	8.3	58.1	12	12	12
OL1225200ACT	2	208-230	208	11.6	81.2	12	12	10
			230	11	77	12	12	10

Note:

Wire sizes are based on maintaining 90% of the nominal voltage at starting amps. Starting amps are assumed to be 6 times the SFA.

Warning:

Failure to consult with a licensed electrical professional can result in serious personal injury or death. Disconnect all power before servicing. Undersized wire between the motor and the power source will limit the starting and load carrying abilities of the motor causing motor overheating and permanent damage to the motor. Wire sizes listed are recommendations only. Consult the National Electric Code (NEC) and any applicable local electrical safety codes. The NEC and GAP recommends a maximum voltage drop of 3%. Install motors and related equipment in accordance with the National Electrical Code (NEC) local electrical safety codes and practices. **It is always the electrician's responsibility to determine and install a wire size that ensures motors can start and run well.**

OLT Plus Series - Connection Diagram


OLT Series Plus



This oilless tank mounted air compressor is UL1450 listed for use in sprinkler systems.




System Layout

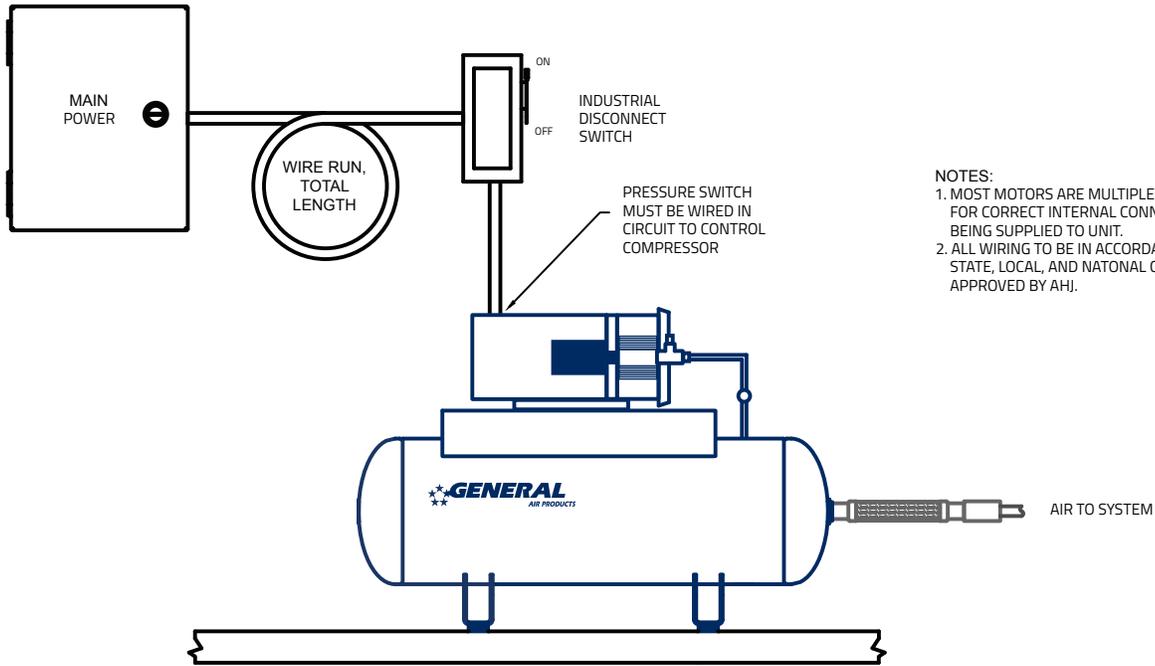

Pressure Switch Connection

PRESSURE SWITCH Diagram

Note: Location of pressure switch varies based on model. This is a general diagram of components. For help specific to your switch please contact General Air Products.

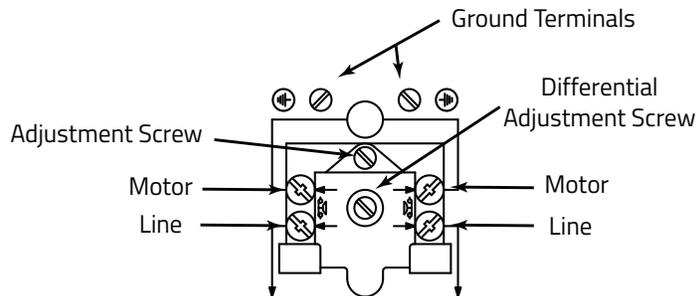

Warning:

Failure to consult with a licensed electrical professional can result in serious personal injury or death. Disconnect all power before servicing. Undersized wire between the motor and the power source will limit the starting and load carrying abilities of the motor causing motor overheating and permanent damage to the motor. Wire sizes listed are recommendations only. Consult the National Electric Code (NEC) and any applicable local electrical safety codes. The NEC and GAP recommends a maximum voltage drop of 3%. Install motors and related equipment in accordance with the National Electrical Code (NEC) local electrical safety codes and practices. **It is always the electrician's responsibility to determine and install a wire size that ensures motors can start and run well.**